

WIRE MACHINE SYSTEMS



6032A Highview Drive
Fort Wayne, IN 46818
Phone 260-483-9269
sales@wire-machine.com

www.wire-machine.com



EXIT GUIDE

The exit guide serves for the precise guidance of the peeled material after the peeling head.

It has a double material guide. The peeled material is guided directly after the peeling head through shell-shaped sliding shoes made of brass bronze. It is then held in place by rolls of tool steel before leaving the exit guide. The concentric adjustment of the outlet guide is done by handwheel or servomotor.